

# Remote Control Listing



## TP-09 Fixed Code Remote

Suits: TP360R

Replacement Case: N/A  
Replacement Battery: GP27A



## TP-10 Fixed Code Remote

Suits: TP360R

Replacement Case: N/A  
Replacement Battery: CR927 (x2)



## TP-21L Fixed Code Duplicating Remote

FIXED CODE MICROCHIP AX5326S

Suits: Most fixed code remotes.  
Must have a working remote to duplicate.

Replacement Case: N/A  
Replacement Battery: GP23



## TP-48 Fixed Code Remote

Suits: BW-120CDL

Replacement Case: N/A  
Replacement Battery: GP27A



## TX22B Rolling Code Remote

ROLLING CODE MICROCHIP HCS200 / HCS300 / HCS301

Suits: AB950, VAE 315-950  
VAE 317-490

Replacement Case: TX22C  
Replacement Battery: CR1616 (x2)



## TX23 Rolling Code Remote

ROLLING CODE MICROCHIP HCS200 / HCS300 / HCS301

Suits: VS120, VS220

Replacement Case: TX23C  
Replacement Battery: CR1616 (x2)



## TX28GB Rolling Code Remote

ROLLING CODE MICROCHIP HCS200 / HCS300 / HCS301

Suits: AB960, CL1100, CL1600  
SS850, SS2950

Replacement Case: TX28CB  
Replacement Battery: GP23



## TX28GS Rolling Code Remote

ROLLING CODE MICROCHIP HCS200 / HCS300 / HCS301

Suits: AB960, CL1100, CL1600  
SS850, SS2950

Replacement Case: TX28CS  
Replacement Battery: GP23



## VAE 318 TX7S Rolling Code Remote

ROLLING CODE MICROCHIP HCS200 / HCS300 / HCS301

Suits: CL1000

Replacement Case: VAE 318 TX7SC  
Replacement Battery: GP27



## VAE 318 TX7 Rolling Code Remote

ROLLING CODE MICROCHIP HCS200 / HCS300 / HCS301

Suits: CL1500, CL2000, STAGE 2A  
STAGE 4A, STAGE 5M, STAGE 5G

Replacement Case: VAE 318 TX7C  
Replacement Battery: GP27



## VAE 318 TX8 1 Fixed Code Remote

FIXED CODE MICROCHIP AX5326S

Suits: VAE 318-2300, VAE 317-550

Replacement Case: VAE 318 TX8 1C  
Replacement Battery: CR1616 (x2)



## VAE 318 TX8 2 Rolling Code Remote

ROLLING CODE MICROCHIP HCS200 / HCS300 / HCS301

Suits: VAE 318-1600, VAE 318-1800  
VAE 318-2600, VAE 318-2700  
VAE 317-650

Replacement Case: VAE 318 TX8 1C  
Replacement Battery: CR1616 (x2)



**VAE 318 TX9 1** Fixed Code Remote  
FIXED CODE MICROCHIP AX5326S

Suits: VAE 317-480, VAE 317-480/4D  
VAE 317-580, VAE 318-120

Replacement Case: VAE 318 TX9C  
Replacement Battery: CR1616 (x2)



**VAE 318 TX9 2** Rolling Code Remote  
ROLLING CODE MICROCHIP HCS200 / HCS300 / HCS301

Suits: VAE 315-800/B2, VAE 315-800P2  
VAE 317-490, VAE 317-490/4D  
VAE 317-320, VAE 317-370

Replacement Case: VAE 318 TX9C  
Replacement Battery: CR1616 (x2)



**TX100** Touch Key

Suits: VAE 315-100, VAE 315-120

Replacement Case: N/A  
Replacement Battery: N/A



**VAE 318 TX1A1** Fixed Code Remote  
FIXED CODE MICROCHIP AX5326S

Suits: VAE 318-1000, VAE 318-2000

Replacement Case: N/A  
Replacement Battery: CR2025 (x2)  
Replacement Remote: TP21L

**\*\* MUST HAVE A WORKING REMOTE \*\***



**VAE 318 TX3** Fixed Code Remote  
FIXED CODE MICROCHIP AX5326S

Suits: VAE 318-2300

Replacement Case: N/A  
Replacement Battery: CR2025 (x2)  
Replacement Remote: VAE 318 TX8 1



**VAE 318-TX5 1** Fixed Code Remote  
FIXED CODE MICROCHIP AX5326S

Suits: VAE 317-480

Replacement Case: N/A  
Replacement Battery: CR2025 (x2)  
Replacement Remote: VAE 318 TX9 1

**HOW TO IDENTIFY A FIXED CODE REMOTE.**



Fixed Code Microchip (18 Legs)



The Fixed Code Microchip will have the following identification  
**AX5326S**

**HOW TO IDENTIFY A ROLLING CODE REMOTE.**



Rolling Code Microchip (8 Legs)



The Rolling Code Microchip will have the following identification  
**HCS200 or HCS300 or HCS301**